User Manual

VRscope

Subject to technical modifications

Copyright: Trivisio Prototyping GmbH, Robert-Bosch-Str. 30, D-63303 Dreieich

2004/01/11

WARNING

Before using the VRscope HMD please read carefully these safety instructions.

Read this handbook and use the VRscope device in strict accordance in order to prevent any damage to your eye, other injury, loss of visual functions, property damage or death.

Children under the age of fifteen may not use this product.

We strongly advise you to get familiar with the VRscope device and its capabilities before you use it for the first time.

Table of Contents

Table of Contents 3

1 Safety instructions 4

1.1 Health concerns 4
1.2 General safety hints 5
1.3 Warning for electrical products 5

2 Content of the VRscope Kit 6

3 Description 7

3.1 Head Mounted Display HMD 7
3.2 Power unit 8
3.3 Charge unit 10

4 General Operating Instructions 12

4.1 Preparation 12
4.2 Connecting external video sources 16
4.3 Adjusting the Interpupil Distance 17
4.4 Exhausted Battery 17
4.5 Using VRscope as a Monitor 18
4.6 Using different Modes 19

5 Maintenance and Cleaning Instructions 21

6 Trouble Shooting 22

7 Technical Data 23

7.1 Head Mounted Display 23
7.2 Power unit 24

1 Safety instructions

1.1 Health concerns

➔ WARNING: Eye Disease, Eye Injury, and Glaucoma

If you have been diagnosed with or are susceptive to eye disease, eye injury, or glaucoma consult your doctor before use and do not use without your doctor's approval.

➔ CAUTION: Heart Disease, High Blood Pressure

If you have a history of heart disease or high blood pressure consult your doctor before use and do not use without his approval.

➔ CAUTION: Seizures

If you have a history of temporary spasm, unconsciousness, or epileptic seizures from light stimulation, consult your doctor before use and do not use without his approval.
If any of the following symptoms occur, if using VRscope, stop using immediately and rest:

- eye fatigue or irritation,
- headaches or dizziness,
- aches and pain in the neck or shoulders,
- double vision,
- nausea or motion sickness,
- inability to focus on the displays.

Misuse or overuse of this product may result in eye damage, or loss of visual functions.

1.2 General safety hints

- ➔ Avoid getting the cable entangled around your neck, body or arms. Use the belt pouch for the power unit and wear the cable close to your body.
- ➔ To ensure that the device does not fall off during use, always use the elastic strap, and have it tightened with an adequate tension.

1.3 Warning for electrical products

- ➔ To avoid any risk of electrocution, do not bring any part of the VRscope in contact with water when the power unit is connected to an AC outlet (e.g. when recharging batteries, using an external TV-, DVD-, Video- or PC-source).
- ➔ Avoid using and storing the VRscope at wet, humid, dusty and smoky surroundings and extreme temperatures.
- ➔ Do not use VRscope at temperatures below -10°C and above +40°C. Avoid dropping or mechanical shock, as frame and displays may be deformed.
- ➔ Always switch off and unplug the VRscope when it will not be used.
- ➔ In case of damage contact your retailer. There are no user serviceable parts. Only qualified service personnel should perform any service required on this product.

2 Content of the VRscope Kit

The VRscope kit contains the following elements. Please check that all of these are included. If any item is not supplied contact your VRscope dealer.
HMD with connecting cable (1),
Power unit (2), Battery (3),
AC/DC transformer with power cord (4), Charge unit (5),
Case (6), Belt pouch (7), Cleaning cloth (8),
Video-Adapter-Cable (9)

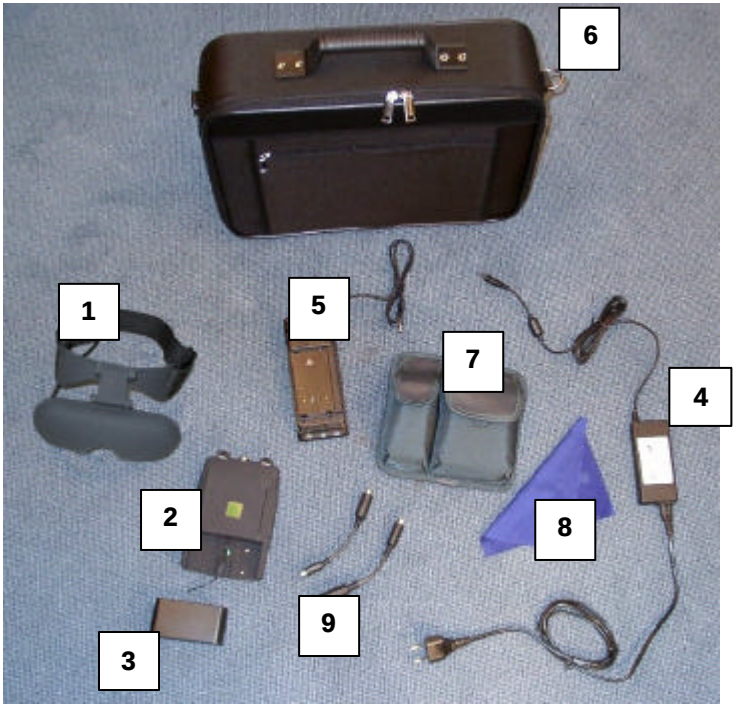

3 Description

3.1 Head Mounted Display HMD

The HMD contains two **microdisplays** (1) to show the images. The **cable** (2) is permanently attached to the HMD and is screwed onto the pocket element by means of a detachable plug contact.

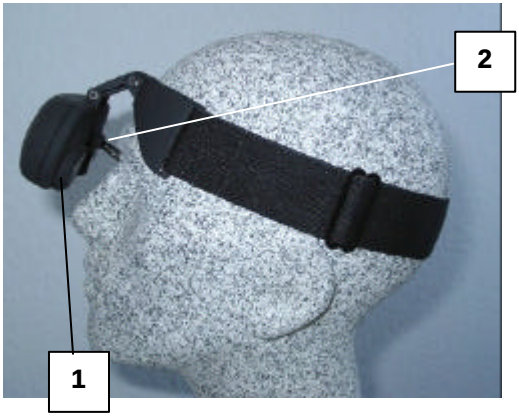

3.2 Power unit

The plastic casing contains the following elements:

(1) Plug connection for cable
(2) Push button for power (illuminated)
(3) Removable Ni-MH rechargeable battery
(4) Connector for power supply (under the battery)
(5) Knob for manual adjustment of brightness
(6) Knob with triple function: for manual adjustment of contrast or electronic zoom or phase, depending upon the mode (see further).

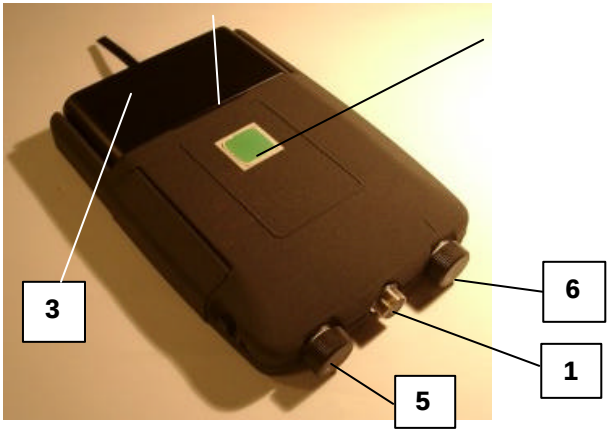

The cable that is attached to the HMD has a plug that must be plugged into the **connector** (1). Pay attention to the mark !
The **push button** (2) on the top of the power unit is used to switch the VRscope on and off. When the device is switched on, a light underneath the button lights up.
The removable Ni-MH **rechargeable battery** (3) enables you to use the VRscope for up to 4 hours (depending on used mode). When removing the battery, an **input connector (4)** for an external power supply becomes visible. (see further)

The **knob on the left** (5, page 8) of the plug connection enables manual adjustment of brightness. The **knob on the right** (6, page 8) of the plug connection has a triple function, it enables manual adjustment of contrast, of the zoom function or phase adjustment in VGA-mode.

The **power unit** also contains:

(1) Push button (no function)
(2) Control lamp (no function)
(3) Socket connector for external video signal
(4) Socket connector for other external image sources (SVGA) or computer.
(5) Button for selecting the input signal mode
(6) Control lamps

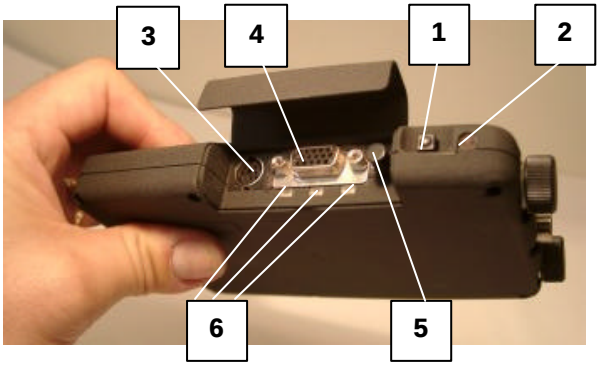

Underneath the flap on the side of the device, there are **socket connectors for video/S-video** (3) **or SVGA** (4).
An input **selection button** (5) for selecting the mode corresponding to the input signal. Underneath are **three control lamps indicating the active choice** (6).

3.3 Charge unit

VRscope includes a removable Ni-MH rechargeable battery (2) and a power supply unit (1) for generating different voltages, which also includes a charging circuit for a mains adapter (3).
It takes approx. 50 min to charge the battery from empty to full if you use the mains adapter supplied with the system. During charging process it is possible to use VRscope parallel.

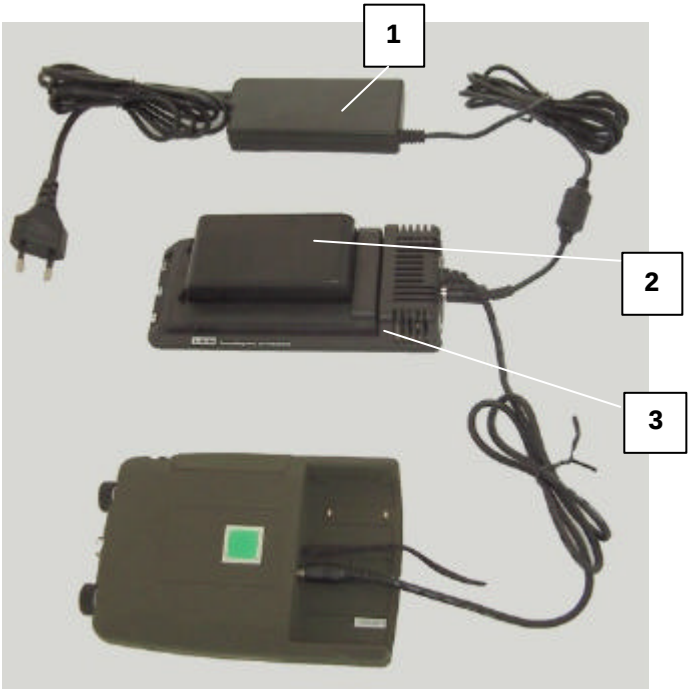

The charge unit has control lights.

- ➔ When loading the unit with a battery to be charged, the **red light** will turn **on**, but only for a while. It should turn off after a certain time (not more than a minute), otherwise it indicates a defect.
- ➔ If voltage input is incorrect or unstable, the **red light** lights up.
- ➔ When charging starts the **green light** will be **on**.
- ➔ When charging is completed, the **green light** will begin to **flash**.
- ➔ The **yellow light** is in relation with the temperature control. If it turns on, the maximum temperature allowed has been reached, and loading is temporarily interrupted.

You may leave the battery in the charge unit without any danger, until charging is complete (= green light flashing).

4 General Operating Instructions

4.1 Preparation

Unpacking the Device

➔ Please unpack the devices and compare with the list under paragraph 2 on page 6 to check that all parts are complete. Please contact your dealer if any parts are missing.

Checking, charging and changing the Battery

Before you use the HMD for the first time, please check whether the battery is fully charged:

➔ Remove the battery from the power unit. To do so, pull the tape down carefully with one hand and push the battery out of the casing with the thumb of your other hand. For that process do not lay down the power unit on the table.

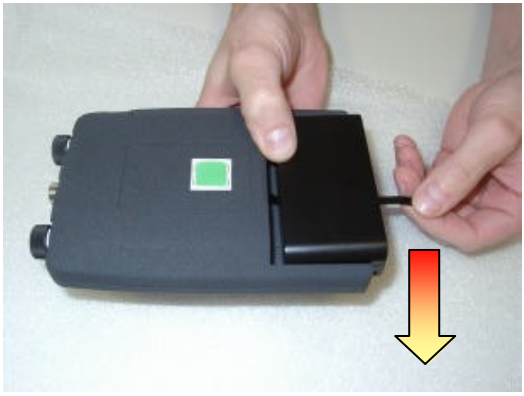

➔ Place the battery in the charger so that the brass-coloured contacts of the battery and charger match. Press the battery lightly until you feel it locks into place. The green control lamp on the front of the charger lights up. When the green control lamp begins to flash, the charging process is completed (see paragraph 3.3 on page 10).

➔ Replace the battery in the power unit. To begin with, this may require some practice.
Please make sure that the contacts of the battery and the power unit match. Holding the battery flat, push it into the power unit as far as the mark. Press down the battery lightly with your thumb and at the same time continue pushing it completely into the power unit until it locks into place. For that process do not lay down the power unit on the table.

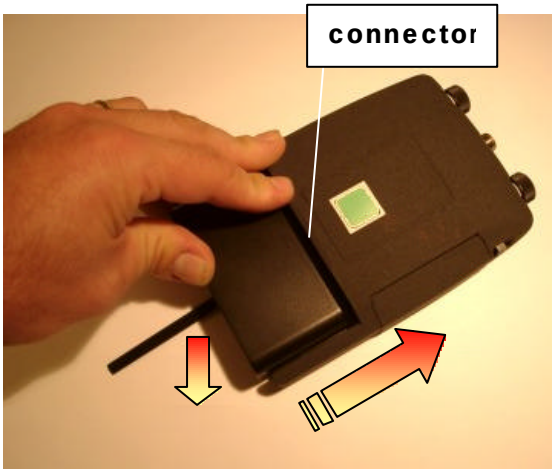

Using the HMD with external power supply

It is possible to have the power supply coming from an external source. One such source is the AC/DC transformer that comes with the charge unit. Its output is 12 V DC, available at the special plug. This plug (see also(4) page 8) fits in in the connector at the battery location of the power unit (visible when the battery is removed).

Connecting HMD and power unit

➔ First connect the HMD to the power unit. The cable is permanently attached to the HMD.

➔ Insert the plug at the loose end of the cable into the socket at the top of the power unit.

➔ The gap in the cable plug must point toward the bottom of the power unit. Insert the plug in the socket and turn the metal ring clockwise to tighten it.

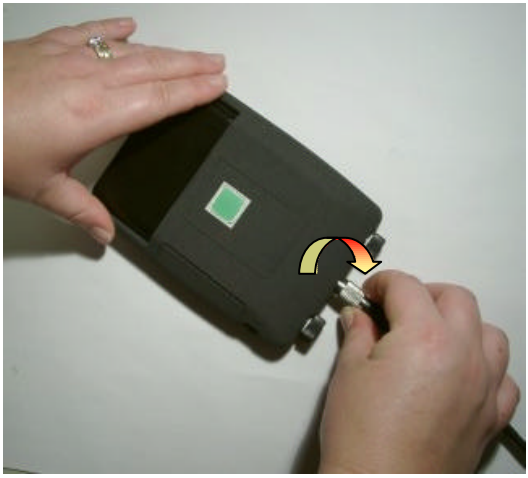

4.2 Connecting external video sources

Choose one of the video adapter cables supplied with the system and plug into the socket connector underneath the flap. Turn on the video source and select the appropriate mode by pushing the select button (1). For further details about different modes see 4.6 page 19.

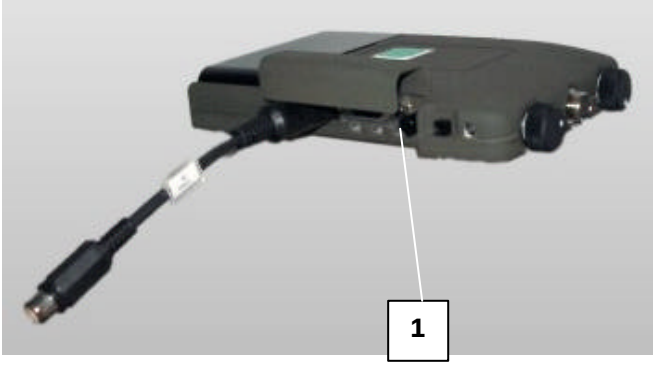

4.3 Adjusting the Interpupil Distance

To optimize the position of the two displays, so that both images are seen as a single visual field, carefully move the oculars into the right position.

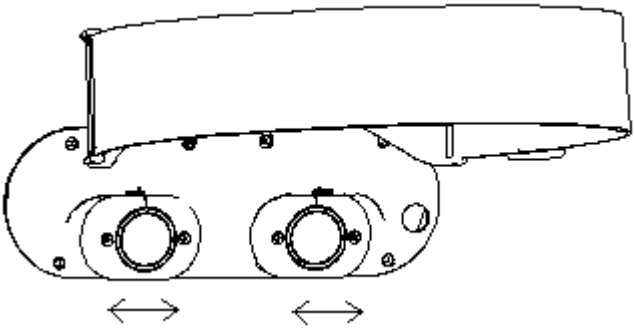

IPD-Adjustment 60-70mm

4.4 Exhausted Battery

When the the battery power is exhausted the illuminated power botton will start blinking and a red frame appears around the image. Within a few minutes the system will stop working.

4.5 Using VRscope as a Monitor

Putting on the HMD

➔ Put on the VRscope HMD. Place the headband around the back of your head and pull it just tight enough to make it fit safely and comfortably.

➔ On the displays inside the HMD, you can now see the pictures of your video source.

➔ Wearing the HMD you will see your surroundings only constricted. For this reason, please, move only carefully or not at all.

Adjusting Brightness and Contrast

➔ Adjust **brightness** (1) and **contrast** (2) with the knobs beside the cable connection. Turn the knobs until the image quality you find best

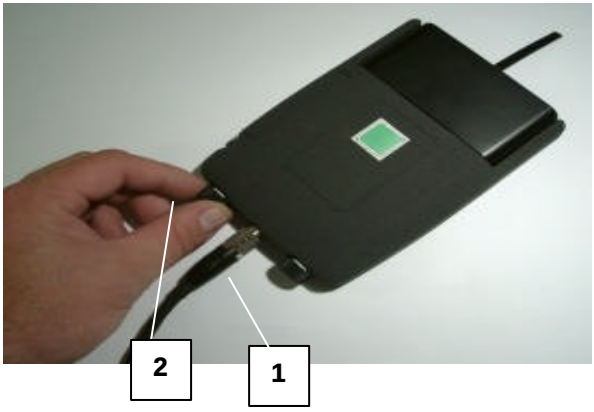

4.6 Using different Modes

The electronics of your VRscope device allows different functions.

The selection of those functions is governed by the **push-button switch (PBS**) (1) that is located underneath the cover flap on the right hand side of the power unit.

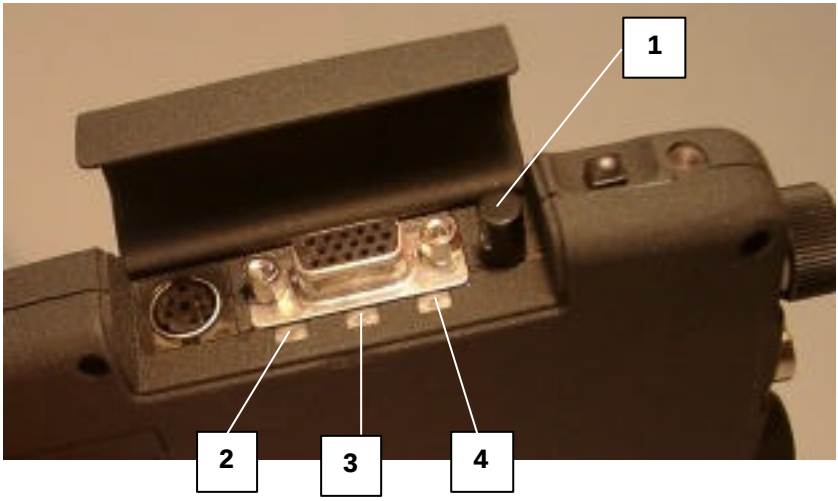

➔ The **basic mode** is the one where the VRscope displays the images as captured by the VGA-adapter. You can apply a PC VGA signal 800x600@ 60Hz, 75Hz, 85Hz or 100Hz. With the contrast button (see "Power unit" page 8) you can adjust the phase of VGA-signal. The **right hand side green LED** (page 19, (4)) will be lit on. When no VGA signal is connected, this LED will be blinking.

➔ When pushing the push-button switch **PBS** (page 19, (1)) **once**, the device discerns between "composite video" or "S-video", and it will equally recognise automatically whether it concerns a NTSC or PAL signal. The **middle green LED** (page 19, (3)) will be lit on to remind you of this mode. When no video signal is connected, this LED will be blinking. In this mode the two knobs beside the cable connection control the brightness and the contrast.

➔ Pushing the **PBS** (page 19, (1)) a **second time** the electronic zoom is activated to magnify the external "composite video" or "S-video" signal. It can be noticed by the green frame that appears around both displays in the HMD and the **left** and **middle green LED** ((2)+(3) page 19) of power unit will be on. The adjustment of the electronic zoom is set by using the contrast knob on the right hand side of the cable connection.

➔ If the PBS is pushed a **third time**, the device goes back into basic mode.

Pushing PBS (1) page 19	**3 green LEDs (2-4) page 19**	**Description**
0x	[ ] [ ] [x]	standard mode = external VGA signal (after turning on device)
	[ ] [ ] [b]	no external VGA signal detected
1x	[ ] [x] [ ]	external video/S-video signal
	[ ] [b] [ ]	no external video signal detected
2x	[x] [x] [ ]	external video signal zoomed, green frame around image
	[b] [b] [ ]	no external video signal detected
3x	[ ] [ ] [x]	back to standard mode

[ ] = LED off [x] = LED lit [b] = LED blinking

5 Maintenance and Cleaning Instructions

To clean the HMD and control unit, use a damp cloth. A light rinsing agent may be added to the water. Do not use any detergents.

To clean the oculars of the HMD use a dry, clean cloth. A cleaning cloth for this purpose is provided with the VRscope-kit.

In case of damage contact your retailer. There are no user serviceable parts. Only qualified service personnel should perform any service required on this product.

6 Trouble Shooting

Problem	Cause	Remedy
Only dark, or only white image	Incorrect brightness. Brightness knob and/or contrast knob are on max. or min. position.	Adjust by using brightness knob and/or contrast knob
Completely white image	After having used electronic zoom, contrast knob is "deregulated", i.e. at an extreme	readjust contrast
No image	Appliance switched off	switch on VRscope with main push button
No image	No or bad connection between HMD and power unit	switch off device, plug connection cable into socket and turn metal ring to tighten
No image	Video cable connected, but wrong video source selected	either connect a video source and select compatible mode for this video signal with PBS

All other problems should be performed by a trained and authorised service provider !

7 Technical Data

7.1 Head Mounted Display

Display	2x SVGA microdisplays 480,000 pixels colour equals 1,440,000 pixels
Field of view	approx. 40° diagonal
Eye distance	60-70 mm adjustable
Operating temperature	-10°C to +40°C
Weight	147g
Dimensions (W/H/D)	155mm/60mm/52mm

7.2 Power unit

Brightness	manually adjustable
Kontrast	manually adjustable
Digital magnifier	built-in electronic zoom 8x
Mode switch	3 modes
Basic mode	SVGA (from PC) 800 x 600@ 60/75/80/100Hz
Second mode	Composite video, S-video in NTSC or PAL
Third mode	external video zoomed
Weight	approx. 380 g (incl. battery)
Dimensions (W/H/D)	105mm/155mm/25mm
Operating temperature	-10°C to +40°C
Battery	changeable + rechargeable Ni-MH 6V/2, 1Ah
Charging time	approx. 50 min, with enclosed power supply
Operating time	approximately based on standard batteries: 2 h (external video source) 4 h (external SVGA source)